

MAX32600 Evaluation Kit

Evaluates: MAX32600

General Description

The MAX32600 evaluation kit (EV kit) provides a convenient platform for evaluating the capabilities of the MAX32600 wellness measurement microcontroller. The EV kit also provides a complete functional system, ideal for developing and debugging applications.

The evaluation board includes a MAX32600 circuit, multiple power options, headers for access to the processor's I/O port pins and analog front-end devices, an 8-digit LCD, USB interface, UART interface, low-power Bluetooth® transceiver, and other general-purpose IO devices.

Features


- Easily Load and Debug Code Using the Included JTAG Adapter
- Selectable Power Sources Including USB, Coin Cell, Two AAA Batteries, or a Bench Power Supply
- Headers for Accessing MAX32600 I/O Pins and Analog Front-End (AFE) Input and Output Signals
- On-Board 8-Digit Alphanumeric LCD Glass

- MAX32600 Internal Real-Time Clock (RTC) with On-Board Supercap Keep-Alive Power
- On-Board Bluetooth 4.0 BLE Transceiver
- General-Purpose Pushbutton Switch, Indicator LEDs, and Beeper (All Connected to GPIOs) for User I/O
- Prototyping Matrix (0.1in Grid) with Integrated Power Rails for Customer Circuitry
- Proven PCB Layout
- Fully Assembled and Tested

EV Kit Contents

- EV Kit Board Containing a MAX32600 with Preprogrammed Demo
- Olimex Arm®-USB-TINY-H JTAG Adapter with JTAG Ribbon Cable
- USB Standard A-to-Standard-B Cable (for Connecting the Olimex JTAG Adapter to a PC)
- USB Standard-A-to-Standard-B Cable
- USB Standard-A-to-Micro-B Adapter Cable
- Quick Start Guide

EV Kit Contents

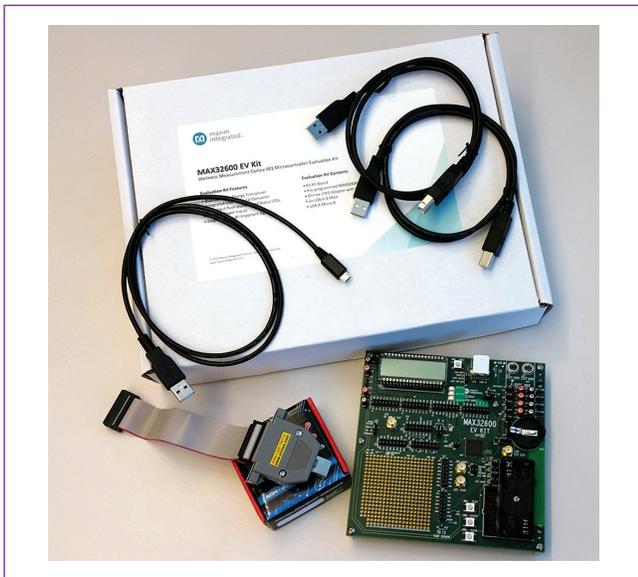

Ordering Information appears at end of data sheet.

Arm is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Maxim is under license.

Quick Start


Getting Started

The EV kit is fully assembled and tested. Follow the steps below to verify board operation:


- 1) While observing safe ESD practices, carefully remove the EV kit board from its packaging. Inspect the board to make sure that no damage occurred during shipment.
- 2) Jumpers/shunts were preinstalled prior to testing and packaging. By default, they select the USB interface as the source of power for the EV kit board. The default jumper settings and all the jumper descriptions are described in the [Detailed Description](#) section.
- 3) The MAX32600 is preprogrammed with a Hello World demo program. To power up the board and run the demo, simply connect the Micro-USB cable to the Micro-USB jack found on the bottom side of the EV kit PCB. The jack is labeled **CN1**. To get +5V power, the other end of the Micro-USB cable can either be connected to a computer or to a USB wall charger. No data is sent over the USB in this demo.
- 4) Once power is applied, the Hello World demo begins, and the three LEDs (D4–D6) start flashing in an alternating fashion.
- 5) To change the LED flashing sequence, press the switch labeled TEST (SW1).
- 6) The demo also displays scrolling text on the LCD.
- 7) Verify that the USB port is supplying +5V if the LEDs do not flash.
- 8) Do not connect any additional USB cables or the Olimex JTAG adapter until after the tool chain/drivers are installed.

If the demo runs as expected, the next step is to download and run the installer, as described in the Quick Start Guide. The installer is a small application that allows the user to select which components the user wants to download and install, including tools, drivers, and documentation. A description of each component and the required hard-drive size is available by clicking on the respective component.

Block Diagram

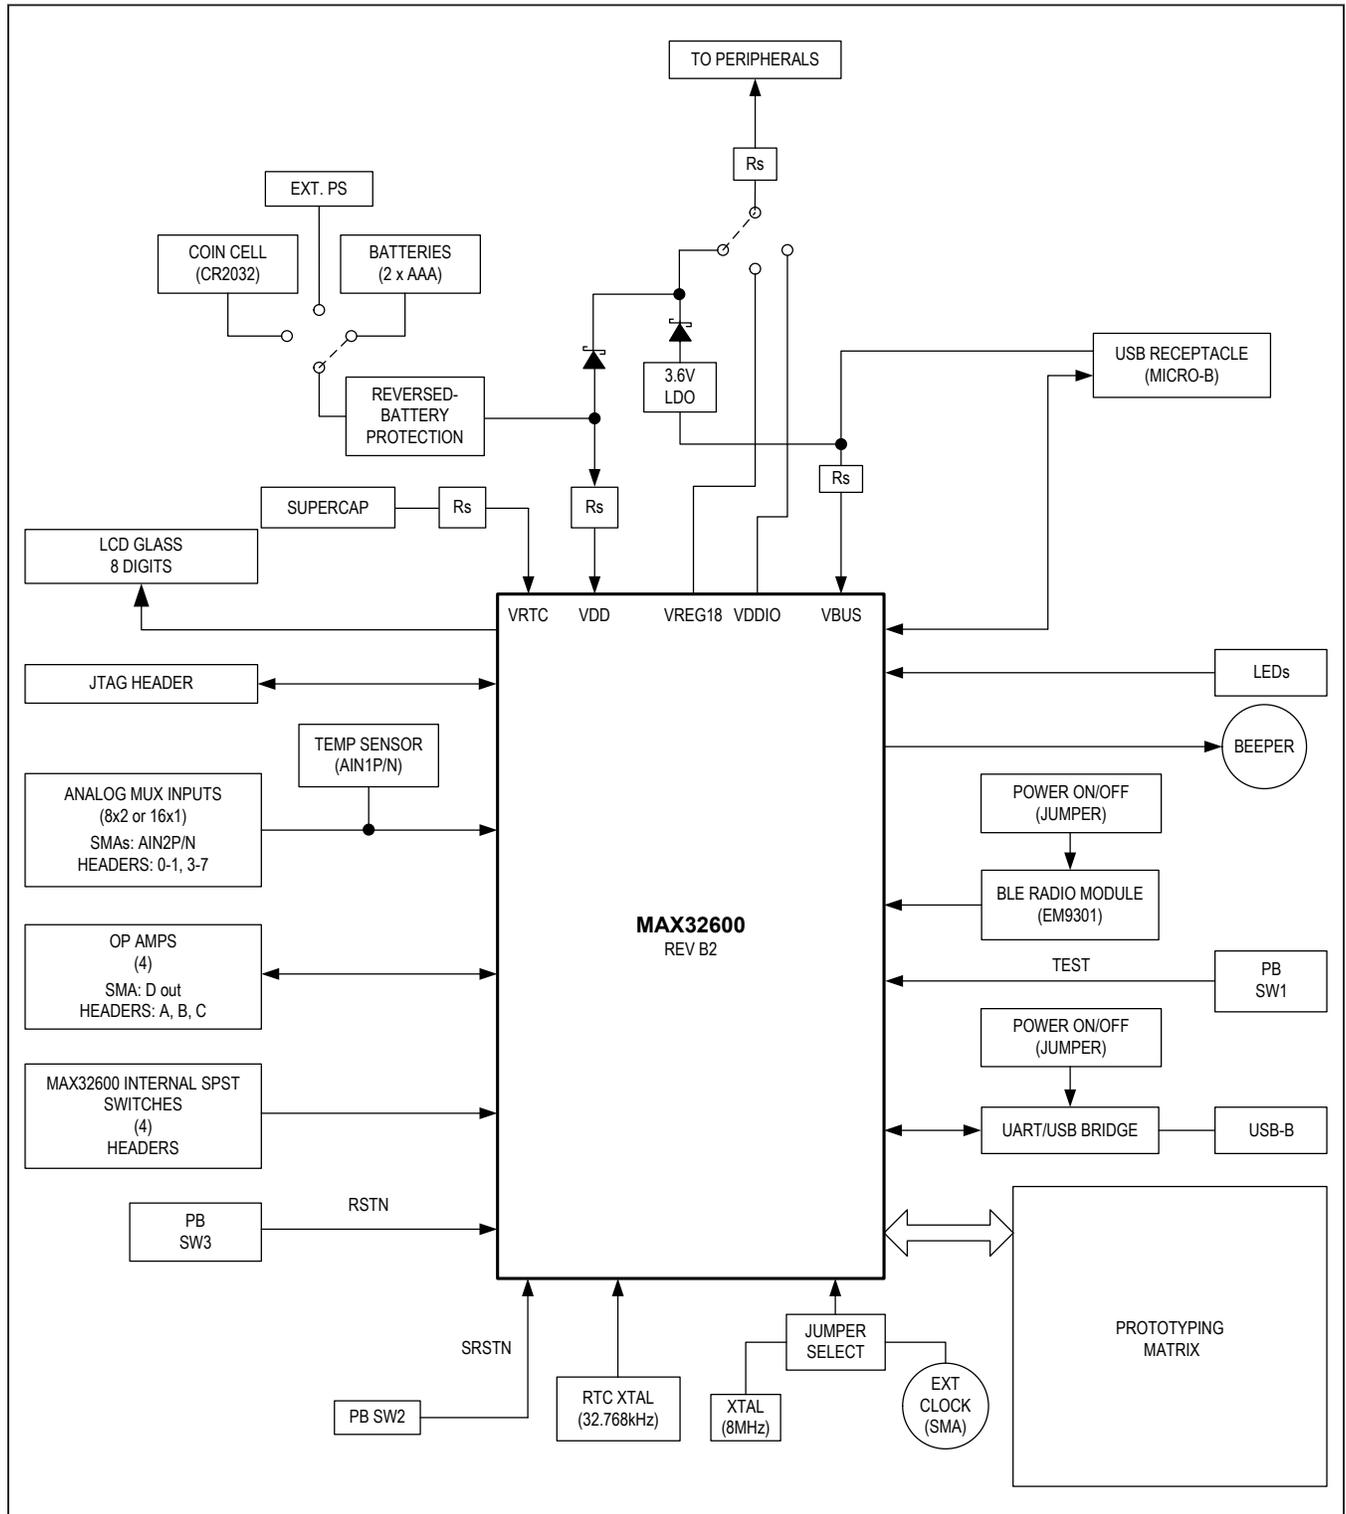

MAX32600 EV Kit Board

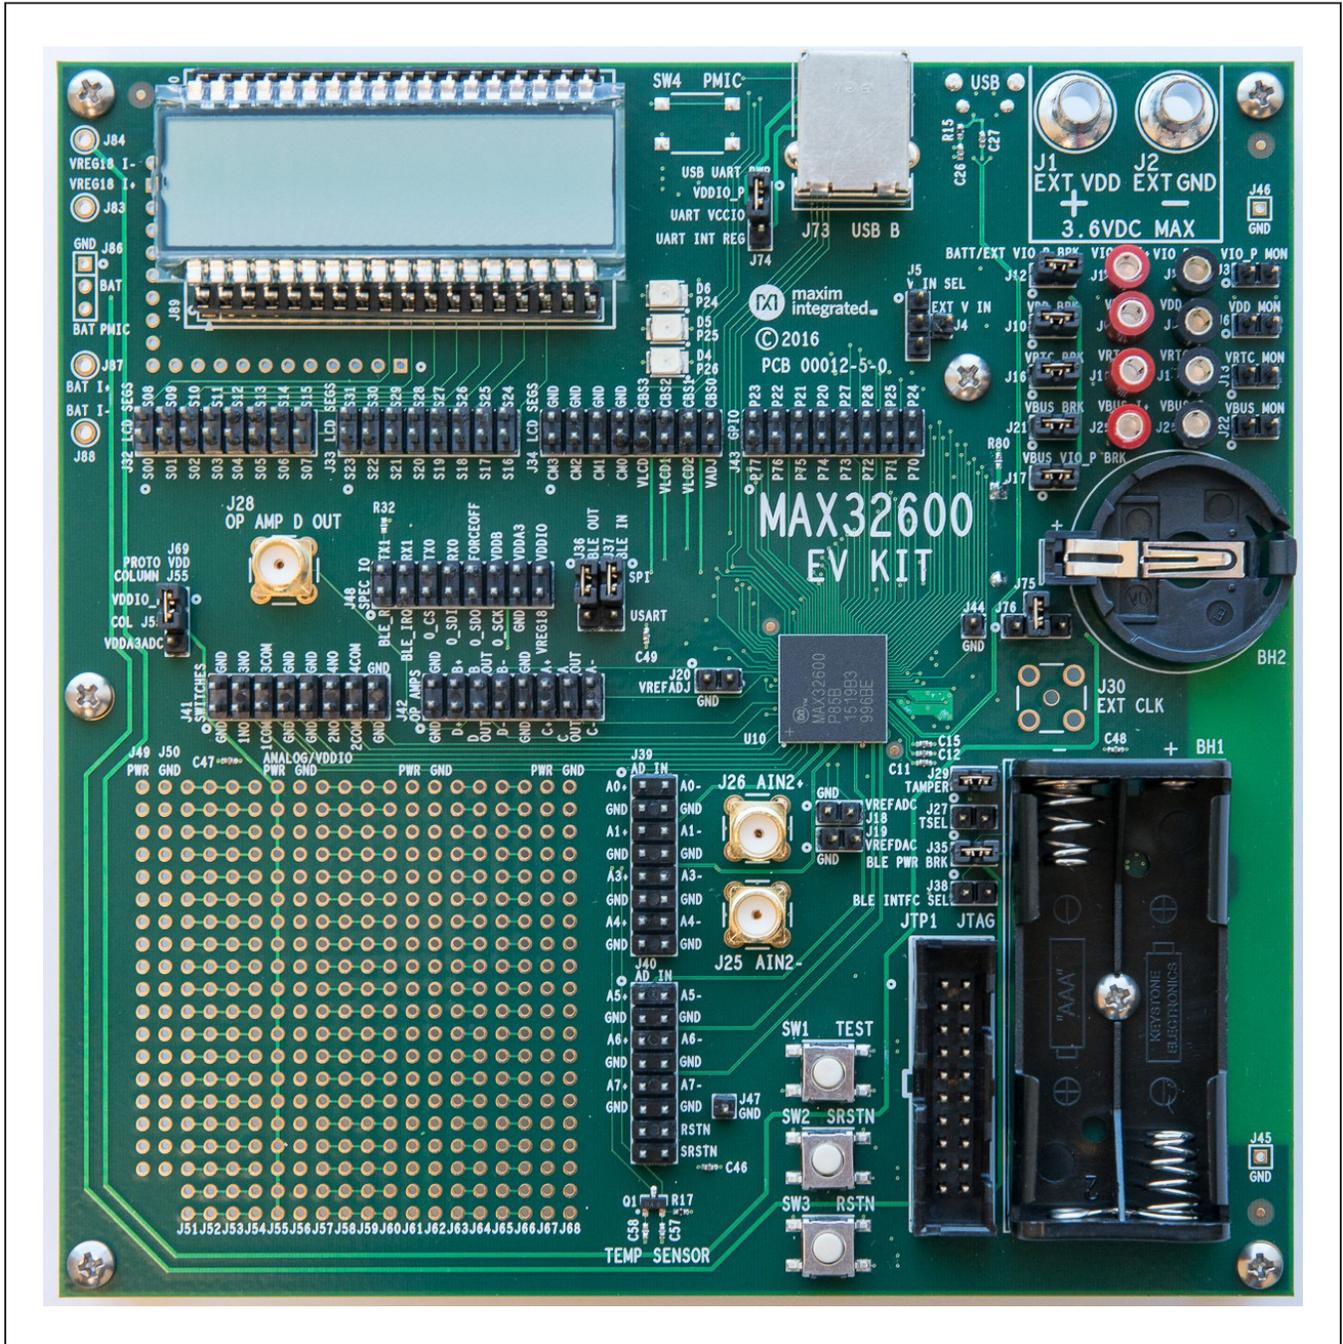

Detailed Description

This section describes the major functions/components of the EV kit. This EV kit is general-purpose in nature and provides many user-selectable options.

Board Power

The EV kit can be powered several ways.

The default jumper settings select the USB interface as the source of power for the EV kit board. To power up the board, simply connect the included Micro-USB cable to the Micro-USB jack (labeled CN1) found on the bottom side of the EV kit PCB. To get +5V power, the other end of the Micro-USB cable can either be connected to a computer or a USB wall charger. No data is sent over the USB, by default.

When 5V is available through the USB CN1 connector, the MAX32600 (IC) is automatically powered from this 5V input. When the IC senses 5V on its V_{BUS} pin, internal power management automatically switches to utilize the V_{BUS} input, with no power drawn from the V_{DD} supply by the IC. Note that the U2 regulator output is set to 3.6V. This allows both the IC and on-board peripherals to be powered by the USB supply when present, and when the USB is not connected, closing jumper J12 allows the board peripherals to be powered from the same supply that powers V_{DD} . When the USB is connected, the 3.6V output supply overrides the V_{DD} source for the purposes of powering V_{DDIO_P} , since current will be forced through Schottky diode D3 and no current drawn through D1; otherwise, the IC's main power-supply input (V_{DD}) can be supplied by on-board batteries or an external bench power supply. For the battery, the user can select either a lithium coin cell (Panasonic CR2032 or equivalent) or two AAA batteries. When using the bench supply, carefully observe the V_{DD} limits (3.6V max). These power options are selectable with the combination of headers J5 and J4. Pin J5-2 is jumpered to one of the surrounding three pins to select the desired input. The V_{DD} input rail is protected against accidental polarity reversals by a resettable fuse (F1) and Schottky diode (D2).

Jumpers J75/J76 provide several other options for powering the on-board peripheral devices, such as the Bluetooth transceiver, LEDs, pushbutton input switches, and piezo buzzer. These options are the currently selected V_{DD} source supply (on-board batteries/bench supply, overridden by the 3.6V regulator output when the USB is connected), the IC's V_{DDIO} output or V_{REG18} output. Note that V_{DDIO} and V_{REG18} have load limits; refer to the MAX32600 IC data sheet for more details.

In cases where power is not supplied through the MAX32600 V_{DD} or V_{BUS} pins, the internal RTC and battery-backed states of the IC are maintained by drawing power from the 0.22mF supercap on V_{RTC} . Application firmware on the IC must first ensure that the supercap has been charged by setting the appropriate control registers; refer to the User's Guide for more details.

Current Monitoring

The V_{DD} , V_{BUS} , and V_{RTC} power rails into the IC incorporate low-resistancel series resistors for measuring supply currents. The V_{DD} and V_{BUS} rails have 1.0 Ω resistors, which provide 1mV/mA (or 1 μ V/ μ A) sensitivity. The V_{RTC} rail has a 100 Ω resistor to provide higher sensitivity (100 μ V/ μ A). Each resistor has two standard 2mm (.080in) tip jacks for access.

The V_{DDIO_P} rail that powers all peripherals on the board, as detailed above, also has a 1.0 Ω series resistor to use for similar current measurements.

Pushbuttons

Pushbutton switch SW1 can be used to generate an input for test purposes on port pin P0.7; SW1 is normally open, and therefore, provides a logic 0 when depressed. Firmware defines the action taken on this switch closure.

Use pushbutton SW2 to manually reset the IC (system-reset source); SW2 is normally open and asserts SRSTN (system reset) when depressed.

Pushbutton SW3 provides a global POR reset function for the IC by asserting the RSTN input.

USB

The IC features an integrated USB 2.0 full-speed interface (12Mbps). This interface is accessible through the USB Micro-B receptacle, CN1.

USB-to-UART Bridge

A USB-to-UART bridge chip (FTDI FT230X) is available on the EV kit. This bridge eliminates the requirement for a physical RS-232 COM port. Instead, MAX32600 UART access is through the USB standard-B connector, J73. Default parameters are 57600 baud, 8 bits, no parity, one stop bit, and no flow control.

The FT230X provides adjustable UART I/O levels based on its VCCIO input. Connecting VCCIO to V_{DDIO_P} (using J74/J75) enables the FT230X I/O levels to track the IC's I/O levels. Maintaining this compatibility is important because of the wide operating range of the IC.

LEDs

Three low-power (2mA typ) LEDs with series current-limiting resistors are included. LEDs D4 (green), D5 (red) and D6 (yellow) connect to the MAX32600 GPIO pins P1.6, P1.5, and P1.4, respectively. An LED illuminates when the appropriate GPIO pin is driven low.

Beeper

A piezoelectric beeper connects to port P1.7. The beeper is activated when the P1.7 output is a square-wave signal. Maximum volume is obtained at the beeper resonant frequency, which is between 4kHz and 4.5kHz. Long-term DC bias should not be applied to the beeper, thus the default P1.7 output should be held at logic 1 (or open-circuit) when the beeper is not driven. For increased volume, drive the beeper differentially by installing R46 and uninstalling R45 and C28. P1.4 must then provide the complement of the P1.7 output.

Bluetooth Low-Energy (BLE) Controller

A low-power Bluetooth controller (EM9301) is included on the EV kit board. The EM9301 controller is Bluetooth Specification V4.0 compliant. Communication with the IC is selectable through either an SPI or UART interface using jumpers J36 and J37. An in-board PCB antenna provides a convenient RF interface. A folded dipole formed by PCB etch is approximately 200Ω and connects directly to the EM9301 RF stage. Refer to the EM Microelectronic EM9301 data sheet for additional details.

HF Crystal/Oscillator

The IC operates from an external 24MHz, 12MHz, or 8MHz crystal. The EV kit board has an 8MHz crystal (Y2) installed. Optionally, an external precision clock source can be selected by installing R27 and depopulating R28. J30 is the SMA connector for input of the external high-frequency clock if the crystal is not used.

SMA Connectors

SMA connectors are included on several AFE interfaces for more robust connectivity to test equipment, if desired. J26 and J25 provide access to the analog mux inputs, AIN2+ and AIN2-/AIN10+, respectively. The configuration of these two pins is programmable. They can be combined as a single differential input, or seen as independent single-ended inputs.

J28 provides access to the OPAMP-D output, so the output of any of the four D-to-A converters can be examined.

Temperature Sensor

Transistor Q1 is configured as a forward-biased diode with a series resistor, R17. If desired, this circuit can be designed into a constant-current configuration using other MAX32600 AFE devices. See Maxim Application Note 4296: *Measuring Temperature with the MAX1358 Data Acquisition System* for an explanation of a similar example configuration using the MAX1358.

JTAG Connector

The Arm standard 20-pin connector is provided by shrouded header JTP1. Various debugger modules are available for this interface. The Olimex ARM-USB-TINY-H debugger is included with the EV kit.

LCD Glass

The IC provides an integrated LCD controller for driving up to 160 segments. A standard 8-digit, reflective LCD glass is included on the EV kit board. Each digit is comprised of a 14-segment character, plus a decimal point and apostrophe for a total segment count of $8 \times 16 = 128$.

Prototyping Area

An area for adding customer-specific circuitry is provided. This matrix is on 0.1in spacing and is usable for solder or wire-wrap construction. Power and ground rails run through the matrix. The pads are interconnected, as shown in [Figure 1](#). In addition, one of the power rails can switch between V_{DDIO_P} and $V_{DDA3ADC}$. Refer to the MAX32600 IC data sheet for $V_{DDA3ADC}$ current-sourcing characteristics.

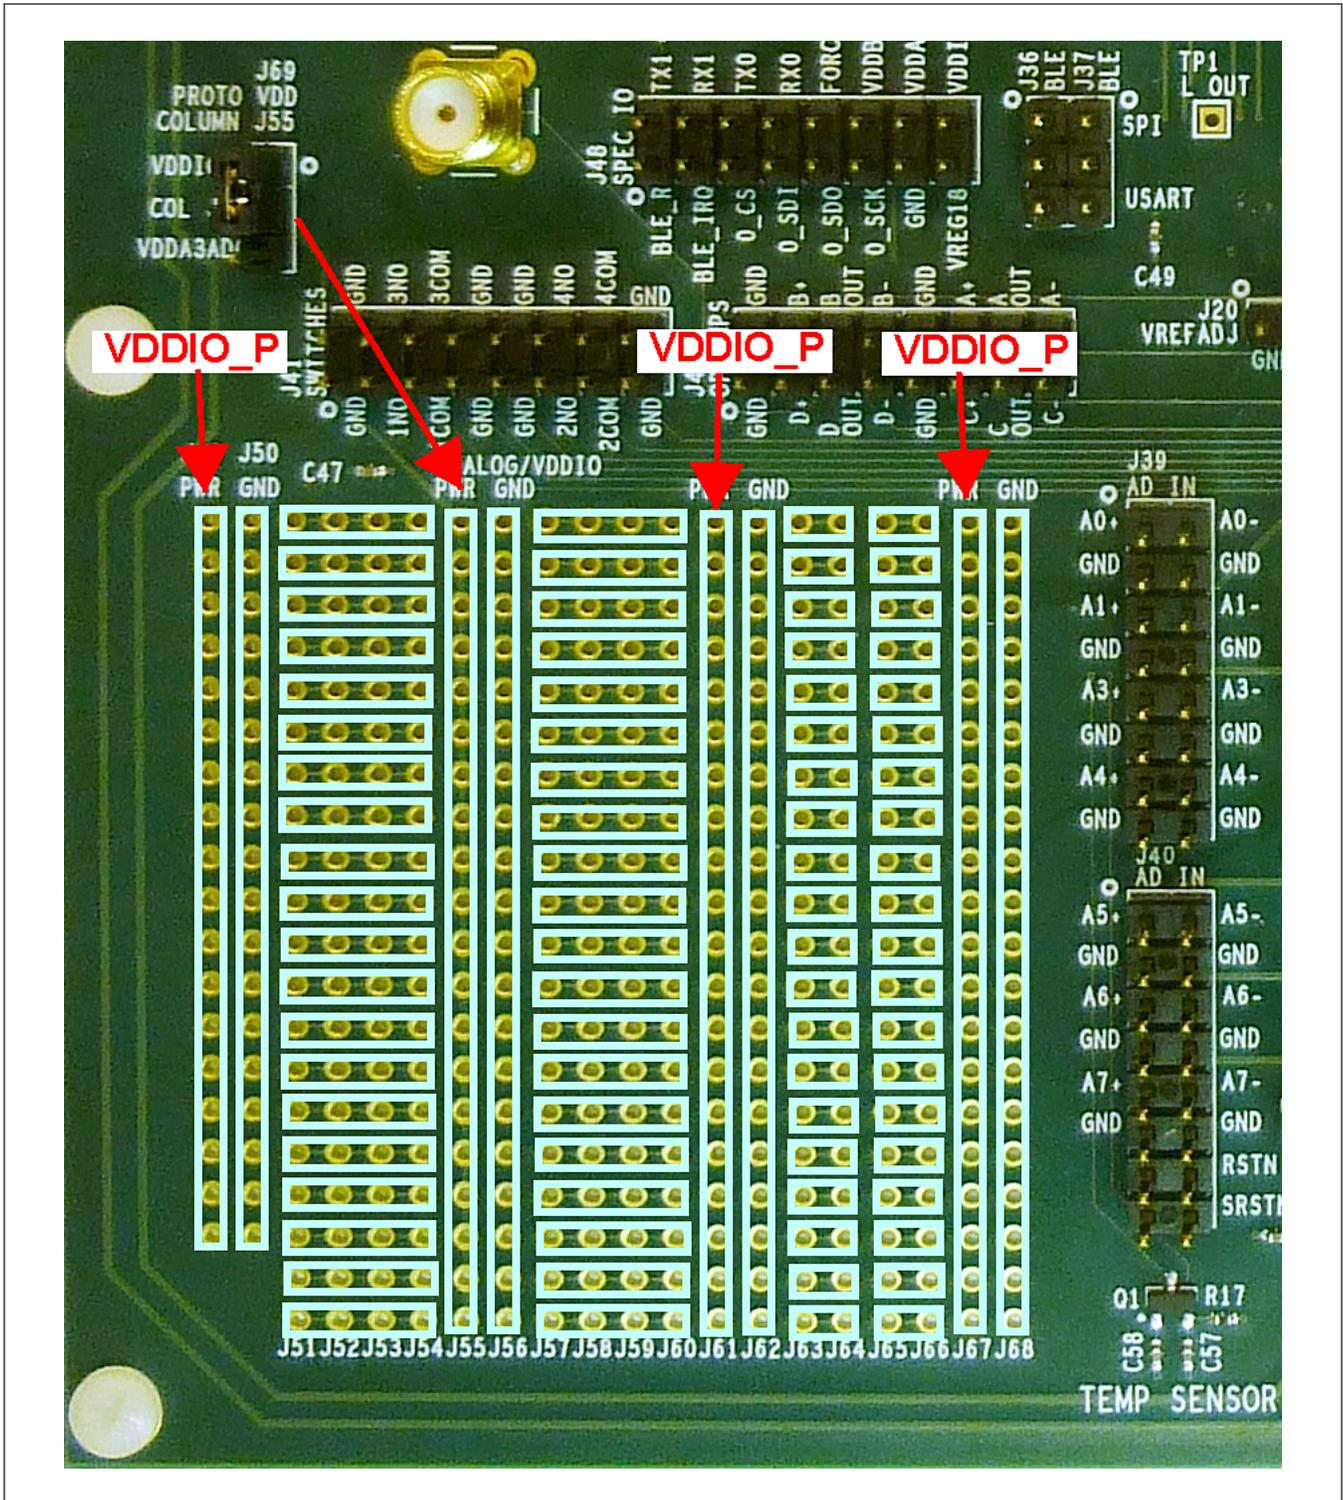


Figure 1. MAX32600 EV Kit Prototype Area

Jumper Descriptions

[Table 1](#) details the functions of the configurable jumper headers on the EV kit board. The headers are standard 0.1in spacing and .025in posts. Settings in Table 1 marked with an asterisk (*) indicate the default settings.

Table 1. EV Kit Jumper Functions and Default Settings

JUMPER	SETTING	EFFECT OF SETTING
J4, J5 (V IN SEL)	Open*	Board is powered by the USB (CN1).
	J5-2 to J4-1 Closed	Selects the external lab supply as power option for the board. The external supply must be connected through the J1(+) and J2(-) banana jacks. Note: Carefully observe polarity and the 3.6V VDD maximum.
	J5-2 to J5-1 Closed	Selects the coin-cell battery as power option for the board. A 3V lithium coin cell (CR2032 or equivalent) must be installed in BH2. The (+) side of the battery is UP.
	J5-2 to J5-3 Closed	Selects the AAA batteries as power option for the board. Two AAA cells (nominal 1.5V each) must be installed in BH1. Observe polarities as marked in the holder.
J10 (VDD BRK)	Open	Connection broken between the MAX32600 VDD power input and Batteries/Ext PS.
	Closed*	Connection enabled between the MAX32600 VDD power input and Batteries/Ext PS.
J12 (BATT/EXT VDDIO_P BRK)	Open	Connection broken between VDDIO_P (board peripherals power) and Batteries/Ext PS.
	Closed*	Connection enabled between VDDIO_P (board peripherals power) and Batteries/Ext PS.
J16 (VRTC BRK)	Open	Connection broken between the MAX32600 VRTC and supercap.
	Closed*	Connection enabled between the MAX32600 VRTC and supercap.
J17 (VBUS VDDIO_P BRK)	Open	Connection broken between the 3.6V LDO and VDDIO_P.
	Closed*	Connection enabled between the 3.6V LDO and VDDIO_P.
J21 (VBUS BRK)	Open	Connection broken between the USB connector VBUS (5V nominal) and the MAX32600 VBUS power input.
	Closed*	Connection enabled between the USB connector VBUS (5V nominal) and the MAX32600 VBUS power input.
J27 (TSEL)	Open*	The MAX32600 TSEL input is logic 1. The MAX32600 JTAG input is connected to the Arm JTAG port.
	Closed	The MAX32600 TSEL input is logic 0. The MAX32600 JTAG input is connected to the MAX32600 test access port (TAP) controller. Note: This setting is intended for Maxim internal testing only and cannot be used for application development.
J29 (TAMPER)	Open	The MAX32600 TamperO-to-TamperI connection is broken. If the dynamic tamper sensor function is enabled on the MAX32600, breaking this connection triggers a tamper response.
	Closed*	The MAX32600 TamperO-to-TamperI connection is made. This connection should be left closed, unless you are testing the dynamic tamper sensor function.

Table 1. EV Kit Jumper Functions and Default Settings (continued)

JUMPER	SETTING	EFFECT OF SETTING
J35 (BLE PWR BRK)	Open	Connection broken between VDDIO_P and the EM9301 BLE controller. The controller is disabled.
	Closed*	Connection enabled between VDDIO_P and the EM9301 BLE controller.
J36 (BLE OUT)	Open	No communication/control between the MAX32600 and the BLE controller.
	2-1*	SPI bus communication between the MAX32600 (SDI) and the BLE (MISO output) is connected.
	2-3	UART communication between the MAX32600 (RX1) and the BLE (Tx) is enabled.
J37 (BLE IN)	Open	No communication/control between the MAX32600 and the BLE controller.
	2-1*	SPI bus communication between the MAX32600 (SDO) and the BLE (MOSI input) is enabled.
	2-3	UART communication between the MAX32600 (TX1) and the BLE (Rx) is enabled.
J38 (BLE INTFC SEL)	Open*	SEL input to the BLE controller is set to logic 1. This enables the EM9301 SPI interface.
	Closed	SEL input to the BLE controller is set to logic 0. This enables the EM9301 UART interface.
J69 (PR VDD SEL)	Open	No power applied to Proto Matrix J55 power rail.
	2-1*	VDDIO_P power connected to Proto Matrix J55 power rail.
	2-3	VDDA3ADC power connected to Proto Matrix J55 power rail. Current constraints exist. Consult Maxim engineering before using this option.
J74 (USB-UART IO LEVEL)	Open	USB-UART Bridge IOs are not powered.
	2-1*	USB-UART Bridge IO levels track VDDIO_P.
	2-3	USB-UART Bridge IO levels are fixed at 3.3V.
J75, J76 (VDDIO_P SELECT)	Open	Board peripherals are not powered.
	J76-2 to J76-1 Closed*	VDDIO output from the MAX32600 powers peripherals.
	J76-2 to J76-3 Closed	VREG18 output from the MAX32600 powers peripherals.
	J76-2 to J75-1 Closed	Batteries, external PS, or LDO power the peripherals. If a USB host is connected to the micro-B connector (CN1), the 3.6V LDO output overrides the battery voltages through the D1/D3 Schottky diodes.

*Default position.

Additional Resources

- Additional Resources
- MAX32600 EV Kit Data Sheet (this document)
- MAX32600 EV Kit Schematic*
- MAX32600 IC Data Sheet*
- MAX32600 User's Guide*
- Arm Cortex® Toolchain User's Guide–README*
- MAX32600 CMSIS Libraries–Firmware User's Guide*
- Example projects and app notes describing them*

*A lot of valuable information resides in the **MAX32600 Resources** component of the Installer. Once this component is installed, the information can then be found in the Windows Start Menu under Maxim Integrated, as shown in [Figure 2](#).

Technical Support

Visit <http://support.maximintegrated.com> for technical support.

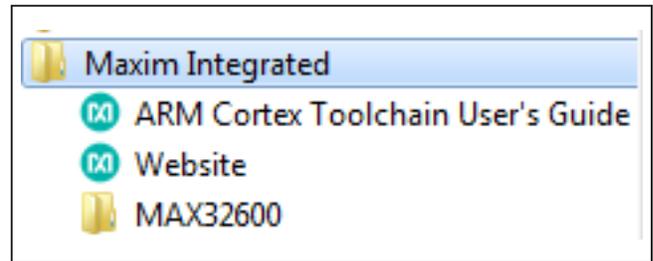


Figure 2. Screenshot of Installed Files and Folders

Ordering Information

PART	TYPE
MAX32600-KIT#	EV Kit

#Denotes RoHS compliant.

Cortex is a registered trademark of Arm Limited (or its subsidiaries) in the US and/or elsewhere.


MAX32600 EV Kit Bill of Materials

PART REFERENCE	QTY	DESCRIPTION
BH1	1	HOLDER BATTERY 2CELL AAA PC MNT
BH2	1	HOLDER BATT COIN COMPACT 20MM
C1, C3, C5, C6, C10, C11, C12, C13, C14, C15, C42	11	CAP CER 1UF 6.3V 10% X5R 0402
C2, C22, C25, C41, C50	5	CAP CER 47UF 6.3V 20% X5R 1206
C4, C7, C9, C20, C24, C35	6	CAP CER 10UF 6.3V 20% X5R 0603
C8	1	CAP SUPER 0.022F 5.5V RADIAL
C16, C38, C39	3	CAP CER 15PF 50V 5% NP0 0402
C17, C18, C19, C21, C23	5	CAP CER 4.7UF 4V 20% X5R 0402
C26, C27, C28, C29, C34, C40, C46, C47, C48, C49, C52, C59	12	CAP CER 0.1UF 16V 10% X7R 0402
C30, C31, C45, C51, C58	5	CAP CER 4700PF 25V 10% X7R 0402
C32, C33, C53, C54	4	CAP CER 27PF 50V 5% NP0 0402
C43, C44	2	CAP CER 100PF 50V 5% NP0 0402
C55, C56	2	CAP CER 1000PF 50V 5% NP0 0402
C57	1	CAP CER 330PF 50V 5% NP0 0402
CN1	1	CONN RCPT MICRO USB R/A SMD
D1, D2, D3	3	DIODE SCHOTTKY 2A 30V SOD-123FL
D4	1	LED GREEN 570NM 2MA PLCC-2 SMD
D5	1	LED RED 630NM 2MA PLCC SMD
D6	1	LED YELLOW 570NM 2MA PLCC-2 SMD
EVM01	-	MAX14676 Evaluation Module
F1	1	POLYSWITCH .20A RESET FUSE SMD
J1, J2	2	BANANA JACK NON-INSULATED .350"
J3, J6, J10, J12, J13, J16, J17, J18, J19, J20, J21, J22, J27, J29, J35, J38	16	CONN HEADER .100 SINGL STR 2POS
J4, J44, J45, J46, J47, J75	6	CONN HEADER .100 SINGL STR 1POS
J5, J36, J37, J69, J74, J76, J86	7	CONN HEADER .100 SINGL STR 3POS
J7, J9, J14, J23, J84, J88	6	CONN JACK TEST VERT INSUL MIL R BLK
J8, J11, J15, J24, J83, J87	6	CONN JACK TEST VERT INSUL MIL R RED
J25, J26, J28, J30	4	CONN SOCKET SMA STR DIE CAST PCB
J32, J33, J34, J39, J40, J41, J42, J43, J48	9	CONN HEADER .100 DUAL STR 8x2 16POS
J49, J50	-	PROTO STRIP 18X1 0.1 LEAD SPACE
J51, J52, J53, J54, J55, J56, J57, J58, J59, J60, J61, J62, J63, J64, J65, J66, J67, J68	-	PROTO STRIP 20X1 0.1 LEAD SPACE
J73	1	CONN RCPT USB TYPE B R/A PCB
J77, J79	2	CONN HEADER FEMALE 12POS .1" GOLD
J78	1	CONN HEADER FEMALE 8POS .1" GOLD
J89, J90	2	CONN IC SOCKET 18POS SIP TIN
JTP1	1	CONN HEADER LOPRO STR 20POS GOLD
L4	1	INDUCTOR 10UH 50MA 0603
Q1	1	TRANSISTOR GP NPN AMP SOT-23 MMBT3904
R1, R2, R14, R74, R94	5	RES 1.0 OHM 1/8W 1% 0805 SMD
R3, R4, R5	3	RES 0.0 OHM 1/10W JUMP 0603 SMD
R6, R21, R46	3	RES 100 OHM 1/8W 1% 0805 SMD
R7, R19, R20, R26, R86	5	RES 4.99K OHM 1/10W 1% 0402 SMD
R8	1	RES 187K OHM 1/10W 1% 0402 SMD
R9, R10, R11, R13, R15, R16, R18, R27, R28, R32, R45, R47, R52, R53, R54, R55, R64, R65, R67, R68, R69, R70, R71, R78, R80, R81, R82, R87, R88, R89, R92, R93, R95, R96, R97, R98, R99	37	RES 0.0 OHM 1/10W 0402 SMD
R12, R83, R84, R85	4	RES 100K OHM 1/10W 1% 0402 SMD
R17	1	RES 4.02K OHM 1/10W 1% 0402 SMD
R22, R23, R24	3	RES 499 OHM 1/10W 1% 0402 SMD
R25, R33, R35, R36, R38, R39, R41, R42, R43, R44, R56, R57, R58, R59, R75, R76, R90, R91	18	RES 10.0K OHM 1/10W 1% 0402 SMD
R37	1	RES 27.0K OHM 1/10W 1% 0402 SMD
R50, R51	2	RES 27.4 OHM 1/10W 1% 0402 SMD


MAX32600 EV Kit Bill of Materials (continued)

PART REFERENCE	QTY	DESCRIPTION
R60, R63	2	RES 49.9 OHM 1/10W 1% 0402 SMD
R61, R62	2	RES 604 OHM 1/10W 1% 0402 SMD
SW1, SW2, SW3, SW4	4	SWITCH TACT 6MM SMD MOM 160GF
U10	1	MAX32600 (MAX32600-P85B+)
U2	1	IC REG LDO 3.15V/ADJ SOT23-5 (MAX8863TEUK+)
U3	1	TVS Diodes - TVS 2Ch Differential ESD Protection (MAX3207EAUT+)
U4	1	BUZZER PIEZO 25VP-P SMD
U5	1	LCD 8-CHAR 14-SEG 0.275" REFL (VIM-878-DP-RC-S-LV)
U7	1	BLE Controller without DCDC (EM9301V02LF024D+)
U11	1	FT230XS USB/UART Bridge (FT230XS-R)
Y1	1	CRYSTAL 32.768KHZ 6.0PF SMD
Y2	1	CRYSTAL 8.000 MHZ 18PF SMD
Y3	1	CRYSTAL 26.0000MHZ 10PF SMD


MAX32600 EV Kit Schematics (1 of 8)

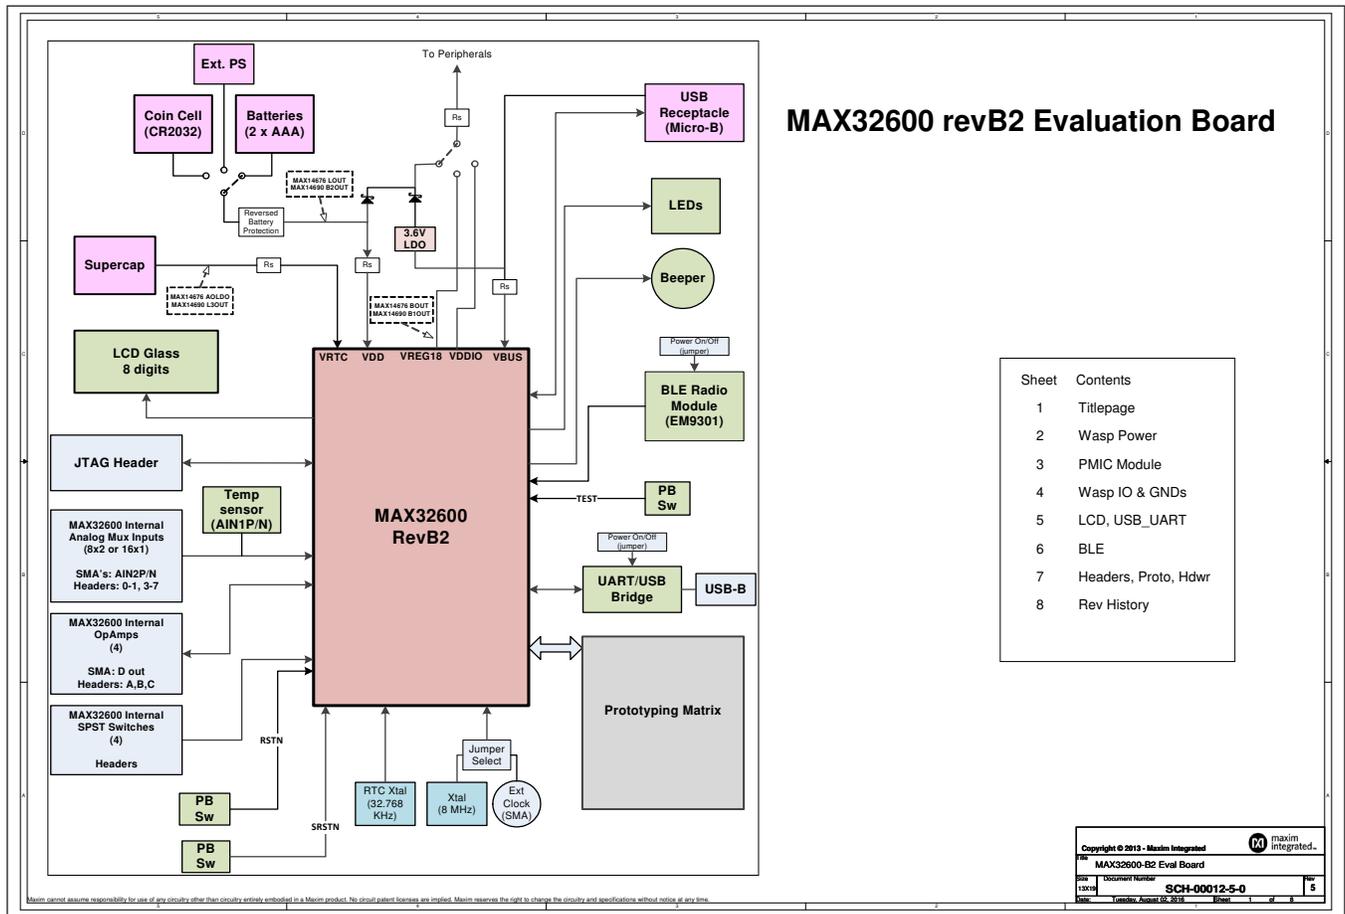


MAX32600 EV Kit Schematics (2 of 8)

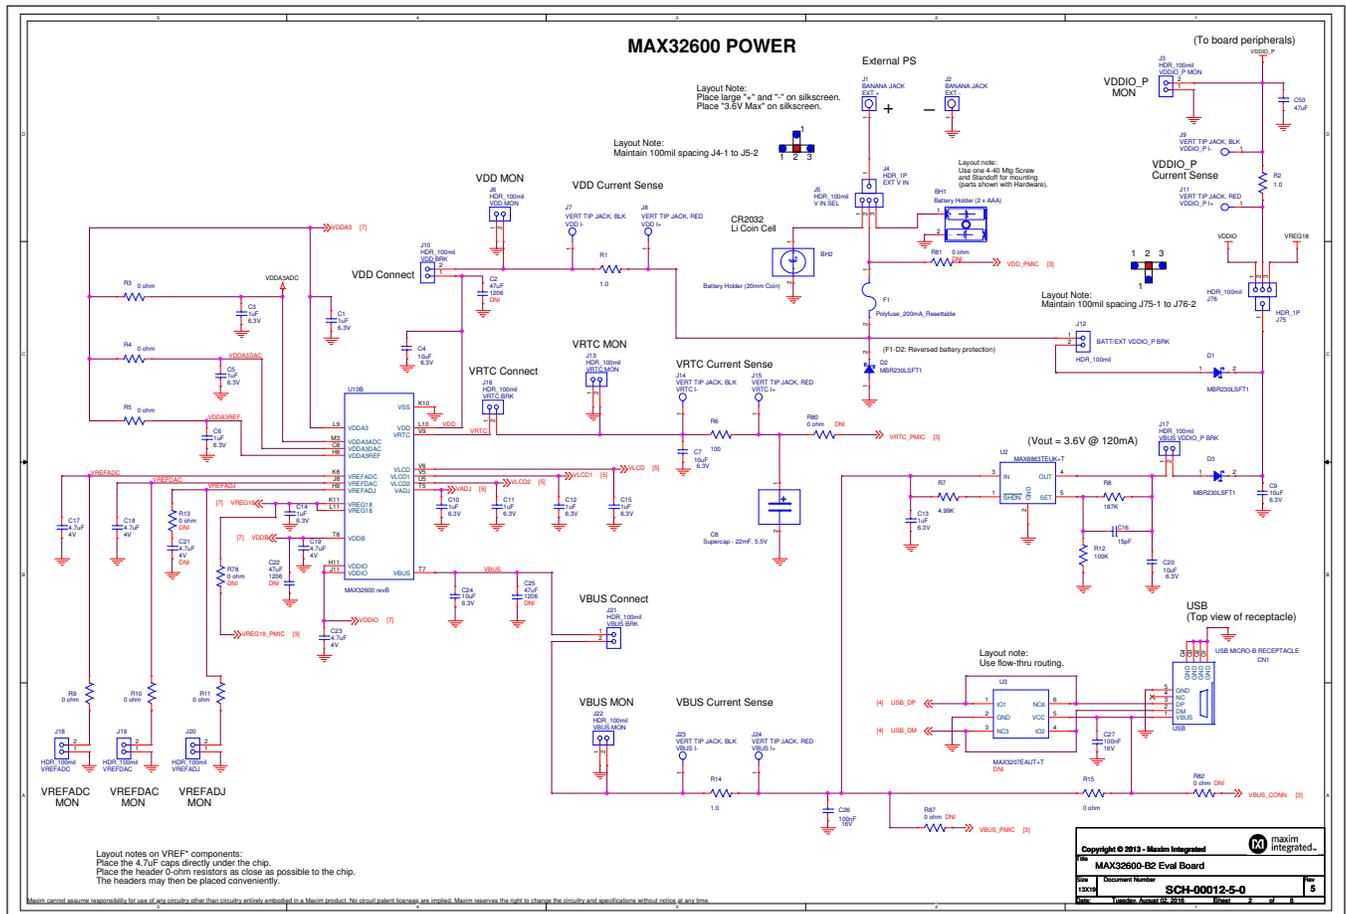


MAX32600 EV Kit Schematics (4 of 8)

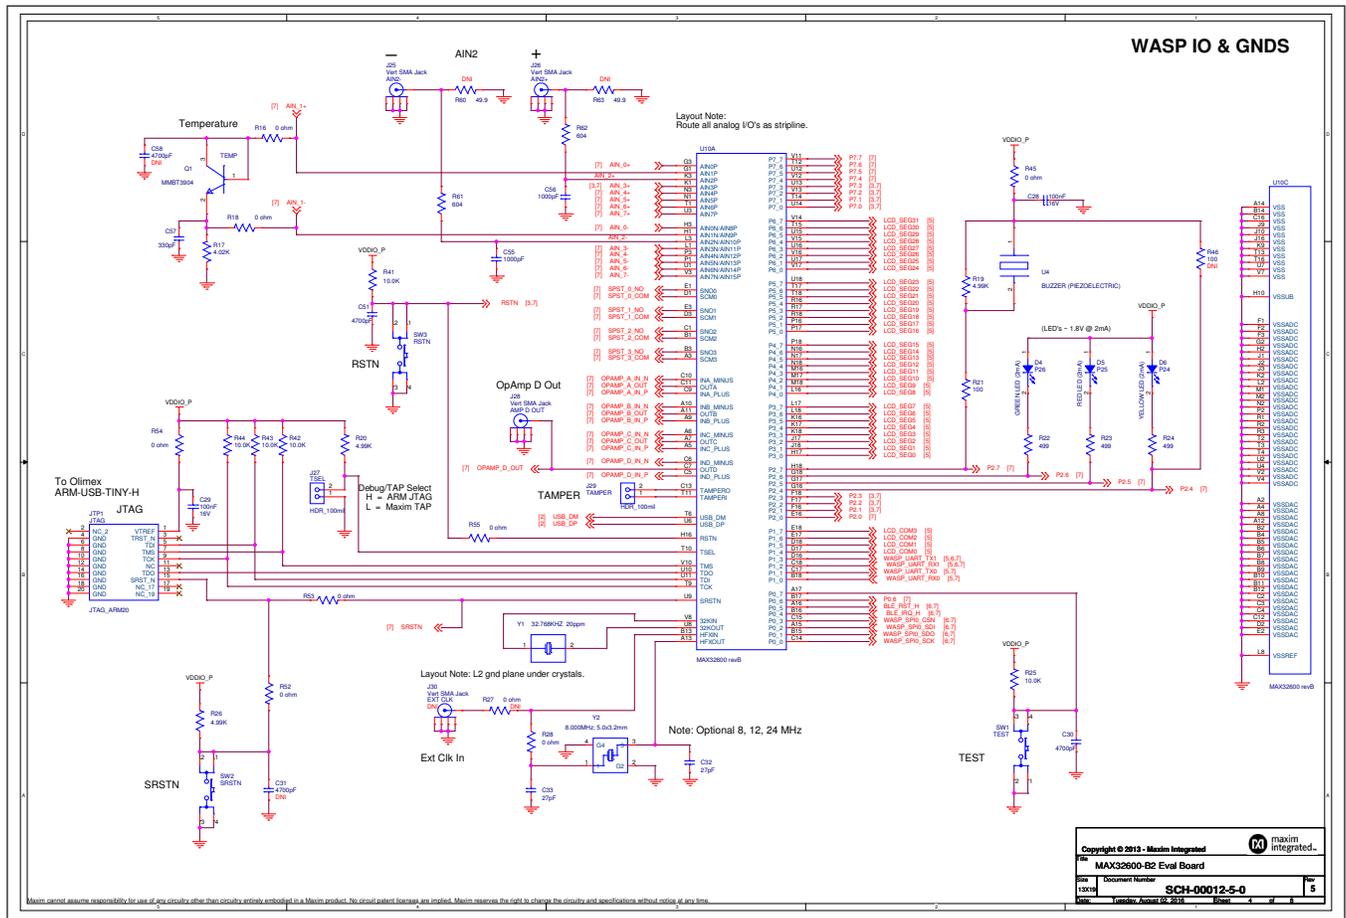


MAX32600 EV Kit Schematics (5 of 8)

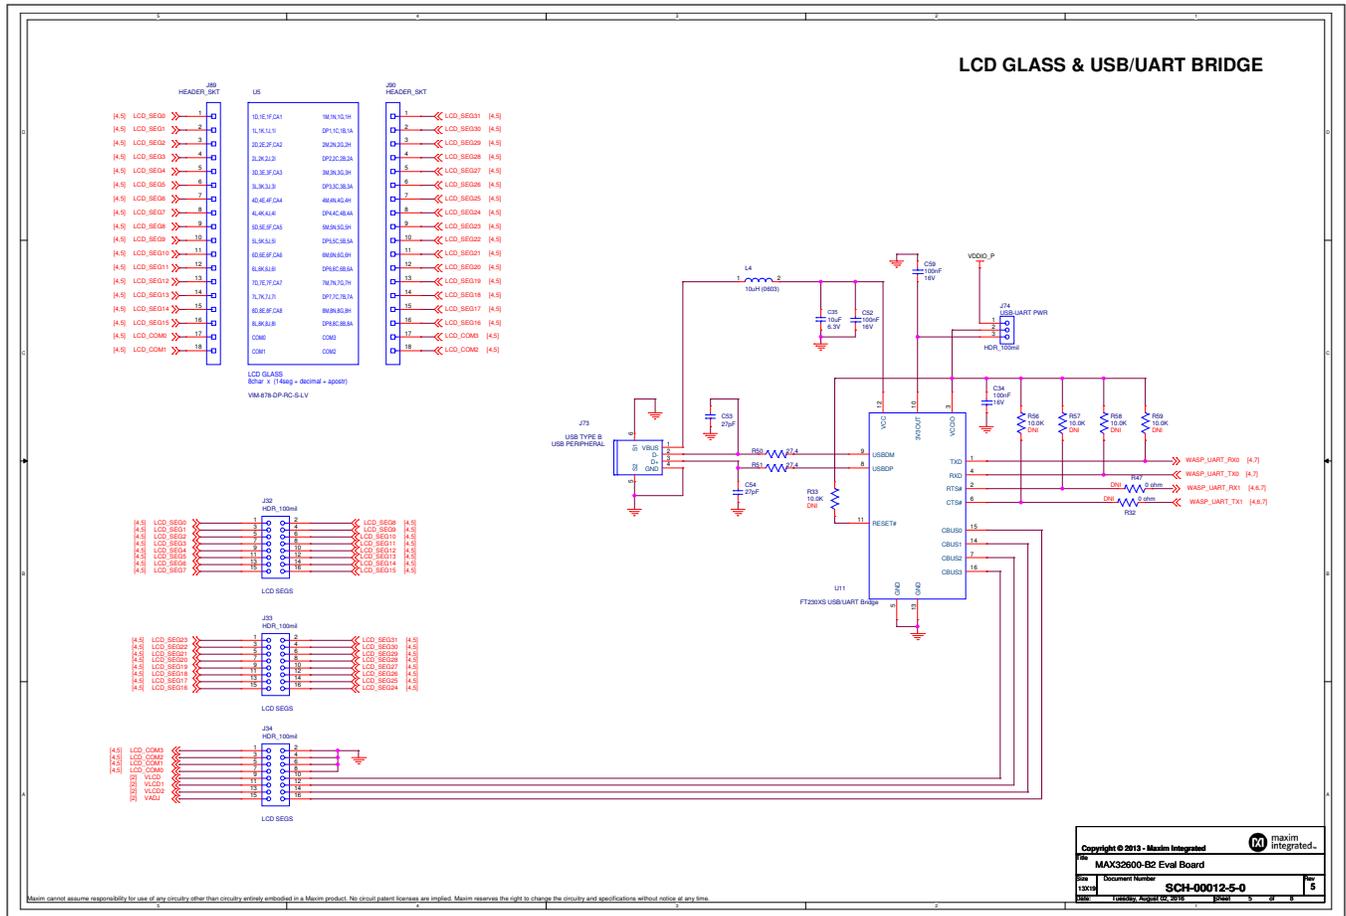

MAX32600 EV Kit Schematics (6 of 8)

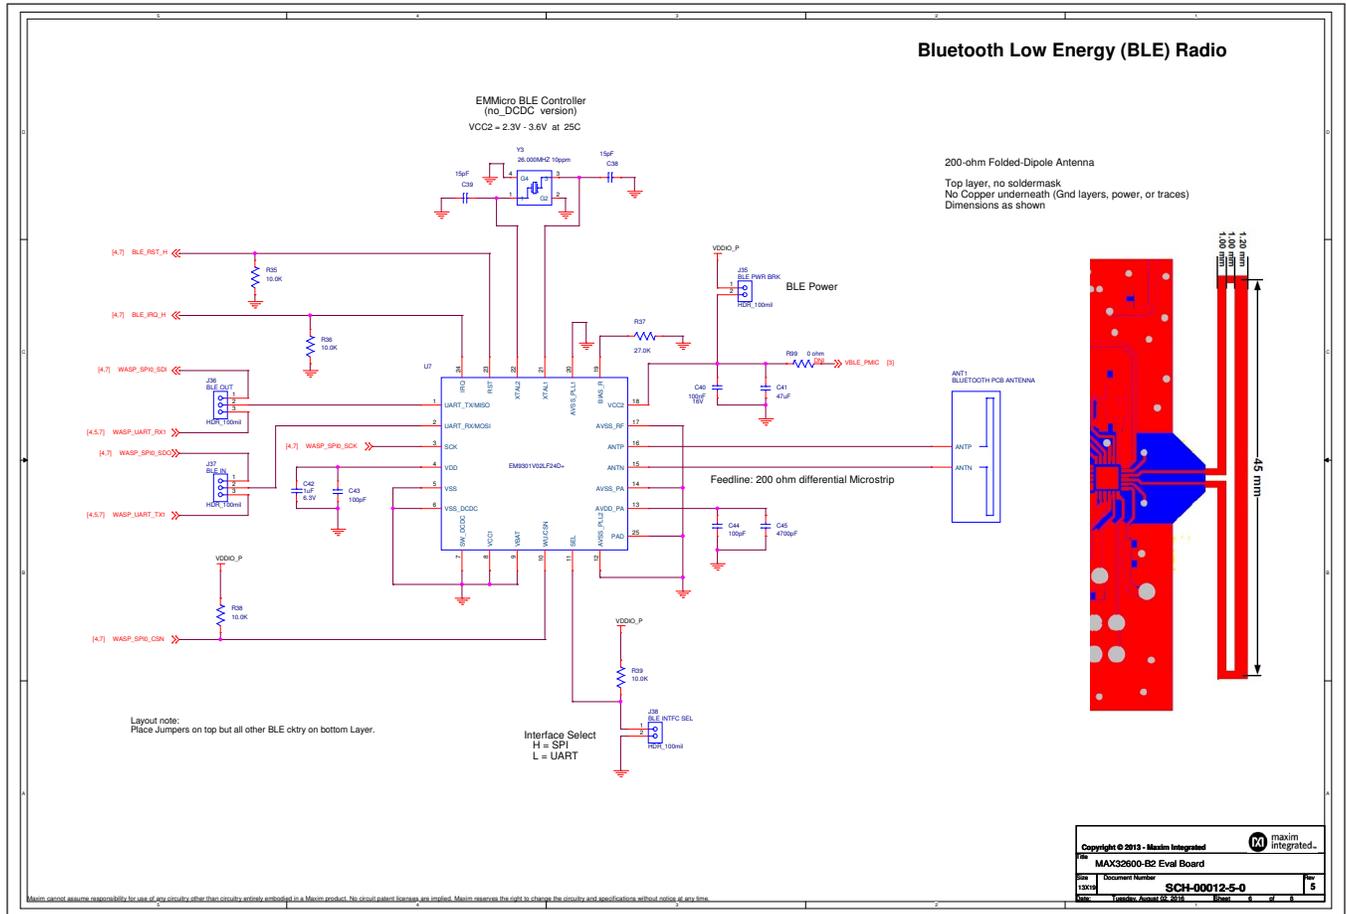

MAX32600 EV Kit Schematics (7 of 8)

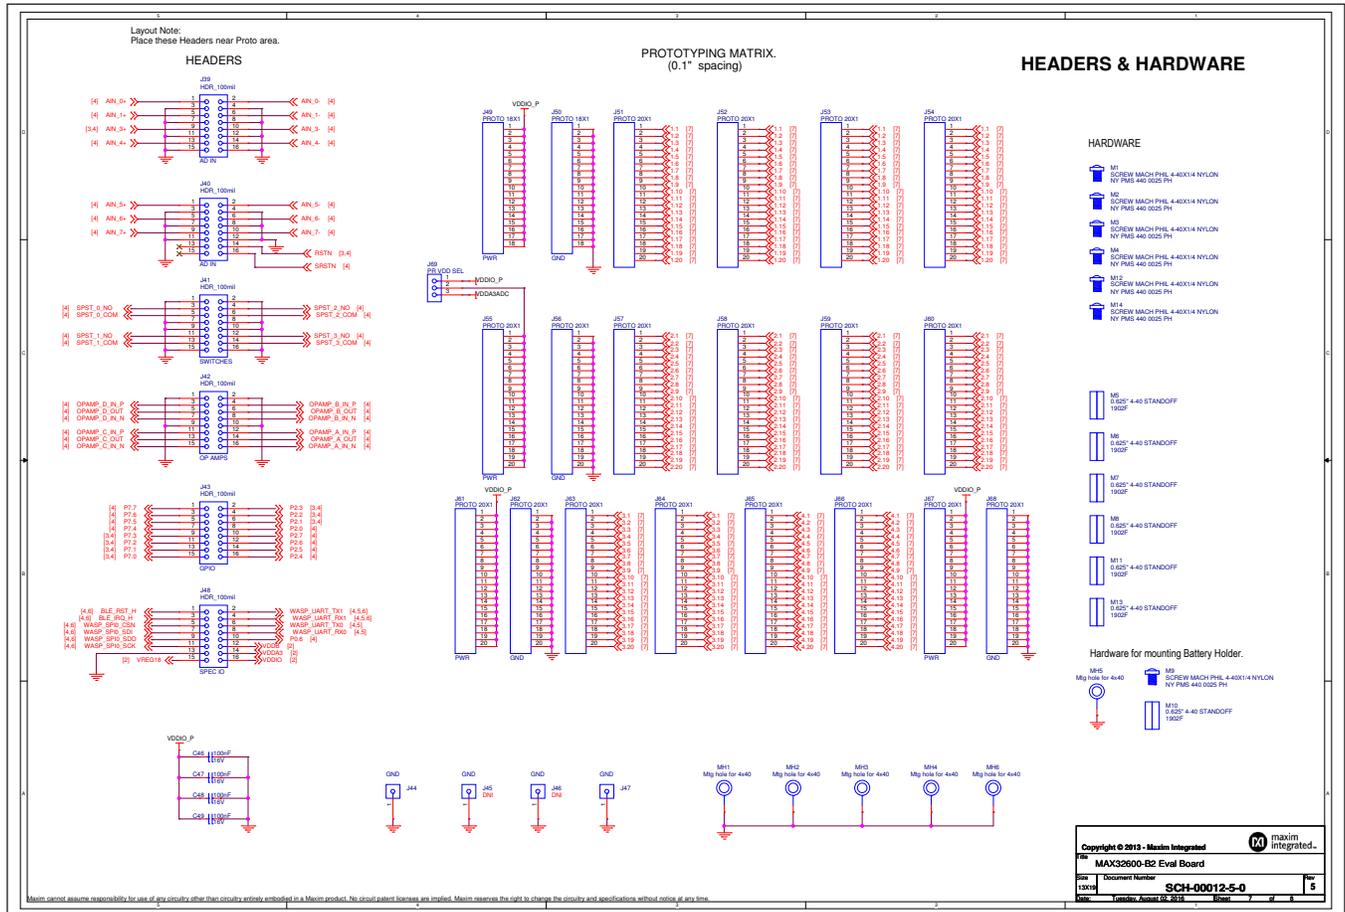

MAX32600 EV Kit Schematics (8 of 8)

Revision History

Rev#	Date	Comments
A01	11-07-2012	Release for 1st design review
A02	12-02-2012	Release to Layout
A03	12-17-2012	Changed to 5.0k 2mm xtal Changed to 1.8V RS232 RxV Deleted VDDIO_P current sense Added VDDIO_P current sense Added temperature sensor ckt
A04	01-03-2013	Modifications per 12/18/12 Design Review Add 100 to USB conn. Add SMA to OpaAmp output Add PMOD section to photo matrix Update M027 ballout to final Released to Layout
A05	01-14-2013	Modifications to schematic to allow netlist to drive PCB features Bluetooth antenna is now an actual part Photo Matrix is now a series of actual parts with interconnects by way of netlist Pin swapping on analog connector for enhanced routing
A06	02-06-2013	Post PCB review Change R13 to 0ohm for DMI part Change the C22 & C33 caps on the HF crystal from 15pF to 27pF Change T2 crystal from 24.000MHz to 3.000MHz Add 4.99k pull-down to GND on the M027 TRSTN Change the part property F04M_ManufactureP/N to B35-1000 for SW1, SW2 Correct label at J5D PCB C042/C043/C044 now adjacent to J49/J55/J61/J67, respectively
1.0	02-15-2013	Release version 1.0
2.0	08-10-2013	Release version 2.0 Add 50k pullups from TRSTN/TMS/TDI/TCK to pin2 of a 3 pin header. Connect p1 to VDDIO, p3 to VDDIO_P, p4 to VDDIO_P. Change R20 & R26 pullups from VDDIO_P to pin2 of the VDDIO/VDDIO_P header above. Delete the R40 pull-down on TRSTN. Connect VREG1B, VDD0 and VDDIO to J48 pins 12, 15, 16. Gnd J48 pins 13 & 14. Add 4.7uF cap from VDDIO_P to GND. Change R21 from 0 ohms to 100 ohms. Remove references between the SPST switches and J41 Hfr to D-3. Add one 0.1uF bypass capacitor (R41 = ?). Correct the PCB padsize for the SMDs resistors (R1, R2, R6, R14, R21). Change the R22 connector to female. Swap pins 2 & 3 connections to U6 Change silk-screen board revision from "A" to "A2". On schematic: Tmpage, add "Rev A2".
3.0	01-10-2014	Release version 3.0 Incorporate MAX32600 RevB. Delete row 5 per datasheet. Repurpose TRSTN to SRSTN. Add jumper option to power all peripherals from VDDIO or VREG1B. Change RS232 xtal to FT232 USB/UART bridge. Add RS switch to SRSTN. Route SRSTN to header. Add differential drive option to beeper. Add 0.1uF cap termination to ANLZ. Route VDDA1 to header. Add 47k cap to O3 P.N. Temp sensor Add design for AD9779 Eval Module option
4.0	05-27-2014	Release version 4.0 DNI C1, B3, C5 Add 0.1uF to U13 BY3OUT Change C53 to 220pF Move LCD COMA to P1 to accommodate new MAX32600 mapping Move LED5 Bumper to P2 Remove (short) VDDA4 filter inductors L1, L2, L3
4.1	08-01-2014	Release version 4.1 Revised DR screen to correctly reflect port mapping in B2. AT J41 F4 through F7 are now labeled F24 through F27; LED1 D4 through D6 F14 through F17 are now labeled F24 through F27 PMIC and associated parts are now all DNI Block diagram updated Headers J25, J24 are now populated Test points J45 and J46 are DNI Numerous optional components are now DNI, refer to schematic References to developmental PMIC names changed to production names
5.0	08-02-2015	Release version 5.0 LDOUT pin redefined as VSS, TP1 removed and net tied to ground plane Edited MAX32600 schematic, symbol changing LDOUT to VSS. References to developmental chip name removed from document

Maxim cannot assume responsibility for use of any circuitry other than circuitry expressly embodied in a Maxim product. No circuit patent licenses are granted. Maxim reserves the right to change the circuitry and specifications without notice at any time.

Copyright © 2015 - Maxim Integrated 

MAX32600-B2 Eval Board

Doc# SCH-00012-5-0

Date: Tuesday, August 04, 2015

Page 5 of 8

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	11/14	Initial release	—
1	10/16	Updated <i>MAX32600 EV Kit Board</i> image, <i>MAX32600 EV Kit Bill of Materials</i> , and <i>MAX32600 EV Kit Schematics</i>	4, 11–20

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time.