

- Installation Instructions
- PDFPanduit POU.
- Operation Manuals
- PDFPViQ Network ..

- Remote access to power consumption data via a web -based GUI provides global network access to real -time power information
- Integrates with Panduit ® PIM™ Software which aggregates power information through a single web based GUI interface
- Integrated power monitoring and management with on unit display provides true RMS input current load (in amps) for each power circuit or phase to properly load balance and maximize power circuits
- Provides user -defined alarm/messaging capabilities for specific events that exceeded thresholds
- Mounting buttons allow tool -less installation of power strips