

MOUNTING LOCATION:

Right side of radio JR

TOOLS REQUIRED:

Hook tool, T-10 Torx driver

9/32" Socket Driver

9/32" box/ open end wrench

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: CHEVY / PONTIAC /

This Page MODELS & YEARS:

CHEVY-Equinox 05-09 & PONT.Torrent 06-09

All Models Covered

CHEVY-Equinox 05-09, & PONT.Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT.-Pursuit 06-09 & G5, 07-09 (pg.2), PONTIAC G6 05-10, G6-Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-XL-7 07-09, BUICK-Enclave 08-12 (pg.8), Acura 07-09 (pg.9), CHEVY-Malibu 08-12 (pg.10), Traverse 09-12 (pg.11)

Instructions for Chevy - Equinox & Pontiac-Torrent

STEP #1: With hook tool assistance pull off the back cover of the center instrument cluster. Start below window switches on the right and left side releasing a total of (4) clips. Set cover aside. For 2007 Model remove shifter by releasing ring at bottom of shifter. With T-10 Torx driver loosen the set screw to remove the shifter.

STEP #2: With your hands, lift up on the back of the bezel that surrounds the shifter, includes climate control, and air vents. There are a total of (8) clips on this bezel. (2) to the right & left of window switches. (2) to lower right & left of climate control, (2) to right & left of radio, and (2) to the right & left of air vents. Lift off this bezel and disconnect window switches if necessary.

STEP #3: Remove the (05-06 Lower)(2007 Upper) right radio screw, place the InDash by PanaVise over the screw hole and replace screw. Optional: Lower right radio screw works with old style radio. Either screw works with the lower screw being difficult to replace bezel.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.



Removal of back cover



Lower Installation Location screw removal



InDash installed showing upper location on new style radio.



Lower Installation Location



05-26-15

INDASH by PANAVISE®

I-751102305

Page 2 of 12

**** ADVISEMENT ****

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

MOUNTING LOCATION:

Upper/Lower Right side of radio

TOOLS REQUIRED:

Hook tool

9/32" Socket Driver

9/32" box/ open end wrench

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: CHEVY/PONTIAC

**MODELS & YEARS: CHEVY-Cobalt 05-10,
PONTIAC-Pursuit 06-09, G5 07-09**

All Models Covered

CHEVY-Equinox 05-09, & PONT-Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT.-Pursuit 06-09 & G5, 07-09 (pg.2), PONTIAC G6 05-10, G6-Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-XL-7 07-09, BUICK-Enclave 08-12 (pg.8), Aura 07-09 (pg.9), CHEVY-Malibu 08-12 (pg.10), Traverse 09-12 (pg.11)

Chevy Cobalt & Pontiac-Pursuit & G5:

STEP #1: With hook tool remove the trim above the glove box. There are (4) strong clips and (1) plastic pin holding this strip on. With hook tool at the upper right side of radio/climate control bezel. Pull to release (1) strong clips, then (1) clip where the right of the bezel between the radio and climate control. The clips are at the same locations to the right of the bezel. There are a total of (6) clips holding this bezel in place. Remove the bezel and set aside.

STEP #2: NOTE: there are (2) locations for this InDash by PanaVise Mount to fit either screw on the right side of the radio can be removed and place the InDash by PanaVise Mount over the screw hole, and replace the screw.

STEP #3: Replace bezel in reverse order.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Trim Strip Removed



InDash Upper Mounting Location



InDash Lower Mounting Location



**Upper Mounting Location Screw
Lower Mounting Location Screw**



05-26-15

There may be recent updates to this Instruction Sheet, please visit our website or contact PanaVise Products, Inc. for the latest revision as well as for the most complete up-to-date PanaVise InDash Applications List: 7540 Colbert Dr., Reno, NV, Phone: 800.759.7535, 775.850.2900, Fax: 800.395.8002, www.panavise.com. © 2015 PanaVise Products, Inc.

INDASH by PANAVISE®

CELL PHONE & MEDIA MOUNT

I-751102305

Page 3 of 12

**** ADVISEMENT ****

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

MOUNTING LOCATION:

Upper/Lower Right side of radio

TOOLS REQUIRED:

Hook tool

9/32" Socket Driver & Ratchet

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: PONTIAC

MODELS & YEARS: G6 05-10

G6Conv07-10&G5Coupe07-09

All Models Covered

CHEVY-Equinox05-09,&PONT.Torrent 06-09(pg.1),
CHEV-Cobalt05-10&PONT.-Pursuit06-09&G5,07-09(pg.2), PONTIACG6 05-10,G6-
Conv07-10&G6 Coupe 07-10(pg.3),CHEVY-HHR 06-11,Impala 06-13
ImpalaLtd.14-15, Monte Carlo 06(pg.4),BUICK-Lucerne06-11, CHEVY-
Silverado&Tahoe07-13,Suburban 07-13,Avalanche07-13,GMC-Sierra&Yukon 07-
13.(pg.5)(Vents Above Radio) Pg.12 for Silverado &Sierra07-13.(Vents Beside
Radio)SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12(pg.7), SUZUKI-
XL-7 07-09,BUICK Enclave08-12(pg.8),Aura07-09 (pg.9),CHEVY- Malibu08-
12(pg.10),Traverse09-12(pg.11)

Pontiac G6 Instructions:

NOTE: Due to the type of clips used, some may need tool assistance to remove.

STEP #1: With hook tool remove drivers side cover on left side of dash by inserting hook tool into edge of cover and pull to release (3) clips. Set cover aside. Repeat on right side of dash. With 9/32" socket driver remove (2) screws exposed on each side of dash that hold the drivers side knee panel and passenger side glove box in place. On the drivers side knee panel remove (2) downward facing screws and (1) screw on the right side of the knee panel. Pull down on the panel below the knee panel to release (2) clips. You do not need to remove this panel. Continue to release the knee panel. There are (2) clips, (1) below the IP dimmer, and (1) below the ignition switch. Let knee panel hang below the steering wheel area.

STEP #2: Begin to remove glove box. Open the glove box door, and remove (3) 9/32" screws at the top of the glove box, (not the latch screws). With hook tool pull down, release the bottom panel below the glove box. There are (3) clips holding this panel in place. Close glove box door. Remove the (3) 9/32" screws that hold the lower part of the glove box in place, and (1) screw that holds the radio/climate control bezel to the glove box.. Release the glove box door by pushing the sides of the glove box tray to the center and it will open all the way. There is (1) screw to the lower left side of the glove box. Remove this screw and the glove box assembly will release. Set glove box aside.

STEP #3: To remove the radio/climate control bezel, use your hands to pull from the bottom back of the large bezel to release (1or2) clips on both sides for the bezel. There is a total of (10) clips holding this bezel in place. See picture. Release all (10) clips, disconnect emergency flasher plug and set bezel aside.


STEP #4: Remove the (1) 9/32 screw from the right side of the climate control. Place mount over screw hole and replace screw. Bend mount slightly to the left to allow installation of the radio/climate control bezel.

STEP #3: Replace bezel, glove box and knee panel in reverse order.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Radio bezel showing clip loca-

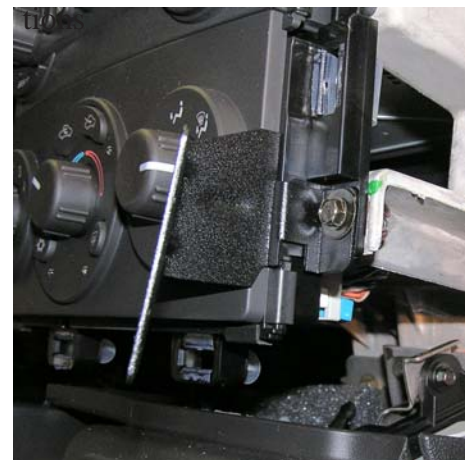

Mount installed showing location



Final Installation Picture - G6



05-26-15

There may be recent updates to this Instruction Sheet, please visit our website or contact PanaVise Products, Inc. for the latest revision as well as for the most complete up-to-date PanaVise InDash Applications List: 7540 Colbert Dr., Reno, NV, Phone: 800.759.7535, 775.850.2900, Fax: 800.395.8002,

www.panavise.com. © 2015 PanaVise Products, Inc.

INDASH by PANAVISE®

I-751102305

Page 4 of 12

**** ADVISEMENT ****

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.



Impala, Monte Carlo Install Picture



Mounting Location Picture - All



HHR Install Picture

MOUNTING LOCATION:

Right side of radio J R

TOOLS REQUIRED:

Hook tool

Phillips Screwdriver

9/32" Socket Driver & Ratchet

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: CHEVROLET

**MODELS & YEARS: Impala 06-12,
Monte Carlo 06-07, HHR-06-11**

All Models Covered

CHEVY-Equinox 05-09, & PONT-Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT-Pursuit 06-09 & G5, 07-09 (pg.2), PONTIAC G6 05-10, G6-
Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-
Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-
13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside
Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-
XL-7 07-09, BUICK-Enclave 08-12 (pg.8), Aura 07-09 (pg.9), CHEVY-Malibu 08-
12 (pg.10), Traverse 09-12 (pg.11)

For Impala and Monte Carlo:

STEP #1: With hook tool remove the radio/climate control bezel by starting at the top corners pulling to release (1 or 2) clips. Continue working your way around the bezel until all (6) clips are released. Set the bezel aside.

STEP #2: With Phillips Head Screwdriver, Remove the top right radio screw. Place the InDash by PanaVise over the hole with the joggle fitting on to the radio. Reinstall the screw with the screwdriver or socket

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.

For HHR:

STEP #1: With your hands remove the rubber insert from inside the tray below the switches on the front center console.

STEP #2: Insert hook tool into (1) of the (2) slots in the tray and push in on the clip to release it. Repeat with the other slot. Continue by pulling straight out on the top corners of the switch plate cover (switches not with cover) to release (2) clips.

STEP #3: Use 9/32" socket driver to remove (2) horizontal screws that hold the console cover in place. Remove the shifter bezel trim ring by carefully lifting up releasing (4) plastic clips. Remove the shifter bezel by lifting up on the back to release (2) clips, then release the front, and set off to the side.

STEP #4: Remove the large Bezel that surrounds the air vents, radio, power outlet, and climate control. Start by inserting the hook tool into the top corner by the air vents, pull to release (1) clip on each side of the vents. Continue pulling out on the bezel to release a total of (8) clips. Set bezel slightly off to the left to allow removal of the radio screw to the upper right of the radio.

STEP #5: With Phillips Head Screwdriver, Remove the top right radio screw. Place the InDash by PanaVise over the hole with the joggle fitting on to the radio. Reinstall the screw with the screwdriver or socket.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.

There may be recent updates to this Instruction Sheet, please visit our website or contact PanaVise Products, Inc. for the latest revision as well as for the most complete up-to-date PanaVise InDash Applications List: 7540 Colbert Dr., Reno, NV, Phone: 800.759.7535, 775.850.2900, Fax: 800.395.8002, www.panavise.com. © 2015 PanaVise Products, Inc.

INDASH by PANAVISE®

I-751102305

Page 5 of 12

MOUNTING LOCATION:

Upper Right side of radio J UR

TOOLS REQUIRED:

Plastic Dash Tool (Wide)

9/32" Socket Driver & Ratchet

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: CHEVY/BUICK

MODELS & YEARS: GMC-Yukon07-13

CHEVY-Tahoe07-13, Suburban07-13,

Avalanche 07-13

All Models Covered

CHEVY-Equinox05-09, & PONT-Torrent 06-09 (pg.1),
CHEV-Cobalt05-10 & PONT-Pursuit06-09 & G5, 07-09 (pg.2), PONTIAC G6 05-10, G6-Conv07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne06-11, CHEVY-Silverado & Tahoe07-13, Suburban 07-13, Avalanche07-13, GMC-Sierra & Yukon 07-13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra07-13, (Vents Beside Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-XL-7 07-09, BUICK-Enclave08-12 (pg.8), Aura07-09 (pg.9), CHEVY-Malibu08-12 (pg.10), Traverse09-12 (pg.11)

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

For Tahoe, Yukon, Avalanche & Suburban:

STEP #1: These clips are tight, and will take some force to remove them. Also, the top strip above the bezel is a part of the bezel. With a Wide Plastic Dash Tool, CAREFULLY! Remove the radio/climate control bezel by starting at the right side by the corners pulling to release (1) clip at a time. Continue working your way around the bezel until all (7) clips are released. Set the bezel aside.

STEP #2: With 9/32" socket driver, Remove the top right radio screw. Place the InDash by PanaVise over the hole with the joggle fitting on to the radio. Reinstall the screw with the socket driver.

STEP #3: Replace the bezel CAREFULLY, (1) clip at a time starting from the right side bottom. The bezel should be carefully guided over the InDash by PanaVise Mount.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.

For Lucerne:

STEP #1: The clips are tight, and will take some force to remove them. With plastic dash tool or hook tool remove the radio/climate control bezel by starting at the top corners pulling to release (1 or 2) clips. Continue working your way around the bezel until all (8) clips are released. Set the bezel aside.

STEP #2: With 9/32" socket driver, Remove the top right radio screw. Place the InDash by PanaVise over the hole with the joggle fitting on to the radio. Reinstall the screw with the screwdriver or socket. Carefully replace the bezel

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Chevy Tahoe, Suburban
2007

Mount Installed



Buick Lucerne 2006
Mount Installed



2013 Suburban, Sierra,
Silverado, Tahoe, Yukon,
Avalanche with new radio,
mount installed.



05-26-15

INDASH by PANAVISE®

I-751102305

Page 6 of 12

MOUNTING LOCATION:

Upper Right side of radio J UR

TOOLS REQUIRED:

Plastic Dash Tool (Wide)

9/32" Socket Driver & Ratchet

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: STAURN

MODELS & YEARS: **Vue 06-07, Ion 06-07**

All Models Covered

CHEVY-Equinox 05-09, & PONT-Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT-Pursuit 06-09 & G5 07-09 (pg.2), PONTIAC G6 05-10, G6-Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-XL-7 07-09, BUICK-Enclave 08-12 (pg.8), Aura 07-09 (pg.9), CHEVY-Malibu 08-12 (pg.10), Traverse 09-12 (pg.11)

* * ADVISEMENT * *

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

For Saturn Vue:

STEP #1: : With dash tool assistance, remove the bezel that surrounds the shifter. Begin at the back, under the lowest part of the bezel. Lift up from the back to release (4) clips, (2) on each side of inner shifter bezel opening. Disconnect the lighter plug and the plug for the right side windows.

STEP #2: With the 9/32" socket driver, remove the (4) screws that hold the tray that is below the climate control. Lift out the tray and set it aside.

STEP #3: Lift up on the bottom of the large bezel that includes the climate control, surrounds the radio, and goes all the way up to the top of the dash. Lift up enough to release the clips then pull out the bezel towards you to release (2) clips on the top part of the bezel. Move the bezel to the right side.

STEP #4: With the 9/32" socket driver remove the screw on the right side of the radio. Attach the InDash Mount over the screw hole. The second bend of the InDash will rest on the face of the radio. Reinstall the one screw and tighten with the (9/32") 7mm socket driver. Reinstall the large bezel, and shifter bezel in reverse order

For Saturn Ion:

STEP #1: Remove the shifter bezel & ring by pulling up on the top cover by the power socket to release (4) clips. The shifter ring will start to come off separately. Pull the ring carefully to release (4) ratcheting clips. Pull back on the shifter bezel to release (2) strong clips. With the emergency brake on move the shifter to D, (By Manual Button release next to shifter Indicator P. Or by turning ignition on.)

STEP #2: With dash tool carefully remove the bezel surrounding the radio / climate control / and air vents, by inserting the hook tool, at the lower right of the bezel between the bezel and dash. Pull to release (1) clip. Repeat on the left side. Continue to release clips, a total of (8). Lift off the bezel and set aside.

STEP #3: With the 9/32" socket driver. Remove the (1) washer-screw that holds the upper right side of the radio in place. Install the InDash by PanaVise Mount into place over the screw hole, and install screw.

STEP #4: Replace the bezel carefully starting from the right side by the Installed Mount.
INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Saturn Vue 2006 Final
Installation Picture



Saturn Ion Final
Installation Picture



05-26-15

INDASH by PANAVISE®

I-751102305

Page 7 of 12

MOUNTING LOCATION:

Upper Right side of radio JUR

TOOLS REQUIRED:

Plastic Dash Tool (Wide)

9/32" Socket Driver & Ratchet

Phillips Screwdriver

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: GMC

MODELS & YEARS: Acadia 2007-12

All Models Covered

CHEVY-Equinox 05-09, & PONT. Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT.-Pursuit 06-09 & G5 07-09 (pg.2), PONTIAC G6 05-10, G6-
Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-
Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-
13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside
Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-
XL-7 07-09, BUICK Enclave 08-12 (pg.8), Aura 07-09 (pg.9), CHEVY- Malibu 08-
12 (pg.10), Traverse 09-12 (pg.11)

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

Start Here for GMC Acadia:

STEP #1: Start by removing the bezel that surrounds the shifter and cup holder but does not include the cup holders.. Using the Hook/ Dash tool in the right rear corner of the bezel pull to release (2) clips. Continue lifting up from the rear of the bezel tilting up until the THIN strip releases above the climate control and the three (3) plastic tabs release from under the radio bezel. Lift the bezel over the shifter and set aside.



Shifter Console Removal

STEP #2: Remove the two (2) Phillips screws that hold the power outlet/ switches/cubby in place. Using your hands with the Dash/Hook assist pull on the bottom of the radio/air vent bezel to release (1) clip each side. Work your way up and around the bezel releasing three (3) clips from the sides, and (2) clips from the top of the bezel.



Screw Removal

STEP #3: With 9/32" socket driver remove the upper right radio screw. Place the InDash by PanaVise Mount over the screw hole and replace the screw. Reinstall the bezels in reverse order.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Final Installation Picture



Mount in Place Showing Location



05-26-15

There may be recent updates to this Instruction Sheet, please visit our website or contact PanaVise Products, Inc. for the latest revision as well as for the most complete up-to-date PanaVise InDash Applications List: 7540 Colbert Dr., Reno, NV, Phone: 800.759.7535, 775.850.2900, Fax: 800.395.8002, www.panavise.com. © 2015 PanaVise Products, Inc.

INDASH by PANAVISE®

I-751102305

Page 8 of 12

MOUNTING LOCATION:

Upper Right side of radio JUR

TOOLS REQUIRED:

Plastic Dash Tool (Wide)
9/32" Socket Driver & Ratchet
Phillips Screwdriver,
T-15 & T-10 Torx Driver

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts
(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: SUZUKI/BUICK

MODELS & YEARS:

SUZUKI: XL-7 07-09

BUICK: Enclave 08-12

All Models Covered

CHEVY-Equinox 05-09, & PONT. Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT.-Pursuit 06-09 & G5 07-09 (pg.2), PONTIAC G6 05-10, G6-Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-XL-7 07-09, BUICK Enclave 08-12 (pg.8), Acura 07-09 (pg.9), CHEVY-Malibu 08-12 (pg.10), Traverse 09-12 (pg.11)

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

Start Here for Suzuki XL-7:

STEP #1: With your fingers, push the sides of the shifter boot together to allow the release of (4) clips on the sides. Lift up the boot to above the shifter to allow access to a T-15 Torx screw that was under the boot at the back of the shifter cavity. Remove this screw. With T-10 Torx, loosen a set screw at the bottom of the shift knob to allow the shift knob to be removed.

STEP #2: Move shifter to N or lower. Lift up on the shifter bezel to release (4) plastic clips. Lift bezel up and over the shifter. With hands and hook tool remove the bezel around the radio and includes the air vents. There are (4) metal clips around the radio and (4) plastic clips around the air vents. Disconnect the emergency flasher plug, and set bezel off to the side.

STEP #3: With 9/32" socket driver remove the top right radio screw. Place the InDash by PanaVise Mount over the hole and replace the screw. Replace the radio/air vent bezel top first then bottom. Next the shifter bezel and shift knob in reverse order.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



T-15 Torx Screw, T-10 Torx Screw



Suzuki XL-7 Final Install Picture

Start Here for Buick Enclave:

STEP #1: With your hands and hook tool remove the bezel that surrounds the radio and climate control by starting at the top corners to release (4) clips. Pull to release (1) more clip at the bottom of the bezel. Set Bezel aside.

STEP #2: With 9/32-(7mm) socket driver remove the top right radio screw and install the InDash by PanaVise Mount. Replace the bezel.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Buick Enclave Final Install Picture



05-26-15

INDASH by PANAVISE®

I-751102305

Page 9 of 12

MOUNTING LOCATION:

Upper Right side of radio JUR

TOOLS REQUIRED:

Plastic Dash Tool (Wide)

9/32" Socket Driver & Ratchet

Phillips Screwdriver,

T-15 & T-10 Torx Driver

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: SATURN

MODELS & YEARS: Aura 2007-2009

All Models Covered

CHEVY-Equinox 05-09, & PONT-Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT-Pursuit 06-09 & G5, 07-09 (pg.2), PONTIAC G6 05-10, G6-
Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-
Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-
13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside
Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-
XL-7 07-09, BUICK-Enclave 08-12 (pg.8), Aura 07-09 (pg.9), CHEVY-Malibu 08-
12 (pg.10), Traverse 09-12 (pg.11)

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

Start Here for Saturn Aura:

STEP #1: With your hands and dash tool remove the shifter ring from around the shifter indicator. There are (6) fine ratcheting clips. Lift the shifter bezel from the back releasing (4) clips. Tilt bezel up from the back to release bezel from under the climate control. Disconnect power outlet plug. Set bezel aside.

STEP #2: Remove (2) 9/32" screws from below the climate control that hold the climate control in place. With dash tool pop the Ignition switch cover out. With your hands, pull out the bottom of the Instrument Panel below the steering column to release (2) Velcro strips.

STEP #3: Start at the bottom corners of the radio / climate control bezel, which includes the section around the radio and goes all the way to the passenger door, and surrounds the ignition switch. Pull out the bottom of the bezel releasing (2) tabs to the outside of the screw flanges. Pull to release (2) Strong clips on each side. Continue to work up the side of the radio stack to release a total of (6) clips, and work out the extension of the bezel to the passenger door, (4) more clips. Pull out this large bezel from the right side of the radio. Be careful to allow the release of the (1) metal clip to the left of the ignition switch, and to be able to get at the 9/32 screw at the upper right side of the radio.

STEP #4: Remove the radio screw, place InDash by PanaVise Mount over the screw hole and replace the screw. Replace bezels in reverse order.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT.



Shifter Bezel Ring Removal



Shifter Bezel Removal



Climate Control Screws



InDash Installed Showing Location

05-26-15



Bezel Removal



Mount in Place



Ignition Switch Removed



There may be recent updates to this Instruction Sheet, please visit our website or contact PanaVise Products, Inc. for the latest revision as well as for the most complete up-to-date PanaVise InDash Applications List: 7540 Colbert Dr., Reno, NV, Phone: 800.759.7535, 775.850.2900, Fax: 800.395.8002, www.panavise.com. © 2015 PanaVise Products, Inc.

INDASH by PANAVISE®

I-751102305

Page 10 of 12

MOUNTING LOCATION:

Upper Right side of radio J UR

TOOLS REQUIRED:

Plastic Dash Tool (Wide)

9/32" Socket Driver & Ratchet

Phillips Screwdriver,

T-15 & T-10 Torx Driver

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts

(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

This Page MFG: CHEVY

MODELS & YEARS: Malibu 08-12

All Models Covered

CHEVY-Equinox 05-09, & PONT-Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT-Pursuit 06-09 & G5, 07-09 (pg.2), PONTIAC G6 05-10, G6-
Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-
Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-
13 (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13 (Vents Beside
Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-XL-7 07-
09, BUICK-Enclave 08-12 (pg.8), Aura 07-09 (pg.9), CHEVY-Malibu 08-12 (pg.10), Traverse 09-
12 (pg.11)

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

For Chevy Malibu:

STEP #1: Shift to Neutral. Lift up on shifter bezel to remove, releasing (4) clips. Tilt up on the back to release (2) flat pins to the right and left of air bag light.

STEP #2: With the 9/32" socket driver, remove the (4) screws that are below the right and left of the air bag switch.

STEP #3: Pull out on the bezel enough to release (1) clip each side.

STEP #4: Continue working your way up the bezel wings, releasing (6) clips. (Does not include the air vents.

STEP #5: With the 9/32" socket driver, remove the (1) screw to the right side of the radio. Place the InDash by PanaVise Mount over the screw hole and replace the screw.

STEP #6: Reinstall the bezel starting from the top and working down to the shifter.

INSTALLATION IS NOW COMPLETE. ENJOY YOUR NEW INDASH by PANAVISE MOUNT




Flat Pins of Shifter Bezel



Radio Bezel Removal



Final Installation Picture

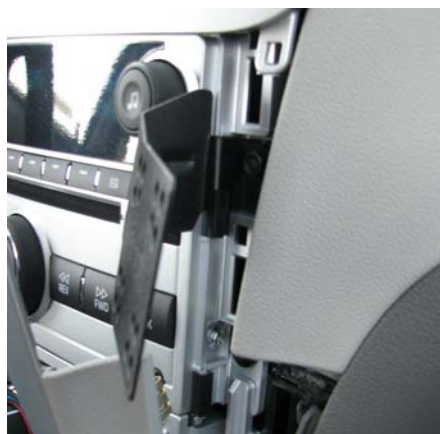

InDash Installed Showing Location



05-26-15

INDASH by PANAVISE®

I-751102305

Page 11 of 12

MOUNTING LOCATION:

Right side of radio JR

TOOLS REQUIRED:

Hook tool/Dash tool
10mm wrench, File
Phillips screwdriver

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts
(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: 751102305

MFG: CHEVY/ GMC/SATURN/BUICK/ SUZUKI

MODELS & YEARS:

THIS PAGE: CHEVY- Traverse 09-12

All Models Covered

CHEVY- Equinox 05-09, & PONT. Torrent 06-09 (pg.1),
CHEV. Cobalt 05-10 & PONT. Pursuit 06-09 & G5 07-09 (pg.2), PONTIAC G6 05-10, G6-Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY- HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK- Lucerne 06-11, CHEVY-
Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC- Sierra & Yukon 07-13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside Radio) SATURN- Vue 06-07, Ion 06-07 (pg.6), GMC- Acadia 07-12 (pg.7), SUZUKI- XL-7 07-09, BUICK Enclave 08-12 (pg.8), Aura 07-09 (pg.9), CHEVY- Malibu 08-12 (pg.10), Traverse 09-12 (pg.11)

** ADVISEMENT **

Read instructions completely prior to starting installation. All InDash Mounts are designed so that after installation, phone is facing normal driver position for left-hand drive vehicles. This mount is not designed to be used in foreign countries with right-hand drive vehicles. Use extreme care when working around the plastic components on the dash. Excess force, can cause breakage of the plastic components.

Start Here for CHEVY Traverse :

STEP #1: With your hands, pull at the side of the radio/climate control bezel to release (9) total clips, and (2) plastic tabs at the top of the bezel. NOTE: the air vent adjustment wheels stay on the dash.

STEP #2: Remove the 9/32" / 7mm bolt from the top or bottom right side of radio.

STEP #3: Place the InDash Mount over the screw hole and tighten the screw. *If radio tab is in the way, you may need to clip it off, And/or remove rubber bumper.*

STEP #4: Replace the bezels in reverse order.

INSTALLATION IS NOW COMPLETE
ENJOY YOUR NEW INDASH by PANAVISE MOUNT



Installation of InDash Mount



05-26-15

There may be recent updates to this Instruction Sheet, please visit our website or contact PanaVise Products, Inc. for the latest revision as well as for the most complete up-to-date PanaVise InDash Applications List: 7540 Colbert Dr., Reno, NV, Phone: 800.759.7535, 775.850.2900, Fax: 800.395.8002, www.panavise.com. © 2015 PanaVise Products, Inc.

INDASH by PANAVISE®

MOUNTING LOCATION:

Right side of radio JR

TOOLS REQUIRED:

Hook tool/Dash tool
7mm socket driver

HARDWARE INCLUDED:

(2) O 8-32 Acorn Nuts
(1) S7-1783 Mount

CELL PHONE & MEDIA MOUNT

INSTALLATION INSTRUCTIONS

PART#: **751102305**

MFG: **CHEVY/ GMC/SATURN/BUICK/ SUZUKI**

MODELS & YEARS:

THIS PAGE: CHEVY-Silverado 07-13, GMC-Sierra 07-13(Air Vents Beside Radio)

All Models Covered

CHEVY-Equinox 05-09, & PONT-Torrent 06-09 (pg.1),
CHEV-Cobalt 05-10 & PONT-Pursuit 06-09 & G5 07-09 (pg.2), PONTIAC G6 05-10, G6-Conv 07-10 & G6 Coupe 07-10 (pg.3), CHEVY-HHR 06-11, **Impala 06-13**
Impala Ltd. 14-15, Monte Carlo 06 (pg.4), BUICK-Lucerne 06-11, CHEVY-Silverado & Tahoe 07-13, Suburban 07-13, Avalanche 07-13, GMC-Sierra & Yukon 07-13, (pg.5) (Vents Above Radio) Pg.12 for Silverado & Sierra 07-13, (Vents Beside Radio) SATURN-Vue 06-07, Ion 06-07 (pg.6), GMC-Acadia 07-12 (pg.7), SUZUKI-XL-7 07-09, BUICK-Enclave 08-12 (pg.8), Acura 07-09 (pg.9), CHEVY-Malibu 08-12 (pg.10), Traverse 09-12 (pg.11)

CHEVY-Silverado 07-13, GMC-Sierra 07-13

STEP #1: With your hands and hook tool assist, release (1) clip on the upper right corner of the drivers knee panel. With 9/32(7mm) socket driver remove the (2) lower dash panel screws, as this will allow the dash lower panel to be removed.

STEP #2: Pull the radio / climate control / air vent bezel off by starting at the top right of the air vent, to the right of the radio. Pull to release a total of (11) clips. Set Parking Brake. Put the column shift into L. Tilt out the bezel around the shifter. Disconnect all plugs and wires. Set bezel aside.

STEP #3: With the 9/32" socket driver, remove the (1) screw to the right side of the radio. Place the InDash by PanaVise Mount over the screw hole and replace the screw. Replace the bezel (NOTE: you may need to angle the mount to the left slightly to get bezel back in place) and knee panel in reverse order.

INSTALLATION IS NOW COMPLETE, ENJOY YOUR NEW INDASH by NAVISE MOUNT



Installation of InDash Mount
on Work Truck dash



Bezel Removed



05-26-15